



DST-PC




Version 5.2.0
PETROL ENGINES
(until December 2011)

				Communication Software						Workshop Manual Information								
				Manage Projects	Read and Delete Trouble Codes and Freeze Frame Data	Live Data Parameter Monitor	Perform Active Test	Utility Menu Pump & Pilot Quantity (Detail) Learning, Injector Programming, Crank time - & X/F sensor Compensation	Help (DST-PC Operation Manual)	1 a) Total Diagnosis Flow b) Inquiry c) Occasional Failure	2 a) Intake System Test Procedure b) Fuel System Test Procedure c) Basic Electric Test Procedure	3 a) Symptoms Resulting From a Non-CRS Malfunction	4 a) Vehicle Diagnostic Connector Location	5 b) System Wiring Diagram c) Data Parameter Reference Values d) ECU Terminal Pin Location	6 a) Symptom Based Troubleshooting b) DTC Based Troubleshooting	7 a) Component Location b) Component Test Procedures	8 Removal & Reinstallation Procedure: a) Injector, b) Supply Pump, c) Common Rail, d) Pump Driving Mechanism, e) Engine	9 a) Wiring Diagram
Toyota	Auris(NRE150)	1NR-FE	1.33L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Auris(ZZE120)	4ZZ-FE	1.4L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Auris(ZZE150)	4ZZ-FE	1.4L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Auris(ZRE151)	1ZR-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Auris(ZZE112)	3ZZ-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Auris(ZZE121)	3ZZ-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Auris(ZRE152)	2ZR-FE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Auris(ZZE123)	2ZZ-GE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis Verso(ACM20L)	1AZ-FE	2.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(AT221)	4A-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZRT270)	1ZR-FAE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZRT221)	3ZZ-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZZT250)	3ZZ-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZRT271)	2ZR-FAE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZZT220)	1ZZ-FE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZZT251)	1ZZ-FE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(AZT250)	1AZ-FE	2.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(AZT250)	1AZ-FSE	2.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(AZT270)	1AZ-FE	2.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZRT272)	3ZR-FAE	2.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(ZRT272)	3ZR-FE	2.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Avensis(AZT251)	2AZ-FSE	2.4L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla Verso(ZGR20)	1ZR-FAE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla Verso(ZNR10)	3ZZ-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla Verso(ZGR21)	2ZR-FAE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla Verso(ZNR11)	1ZZ-FE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(NRE150)	1NR-FE	1.33L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(ZZE120)	4ZZ-FE	1.4L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(ZZE150)	4ZZ-FE	1.4L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(ZRE151)	1ZR-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(ZZE112)	3ZZ-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(ZZE121)	3ZZ-FE	1.6L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(ZRE152)	2ZR-FE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Corolla(ZZE123)	2ZZ-GE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris Verso/Echo Verso(NCP21)	1NZ-FE	1.33L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris Verso/Echo Verso(NCP25)	1NZ-FE	1.33L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris Verso/Echo Verso(NCP20)	2NZ-FE	1.3L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(KSP90)	1KR-FE	1.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(SCP10)	1SZ-FE	1.0L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(NCP13)	1NZ-FE	1.33L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(NSP90)	1NR-FE	1.33L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(NCP10)	2NZ-FE	1.3L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(NCP15)	2NZ-FE	1.3L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(SCP13)	2SZ-FE	1.3L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(SCP90)	2SZ-FE	1.3L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									
Toyota	Yaris/Echo(ZSP90)	2ZR-FE	1.8L	V5.1.0	V5.1.0	V5.1.0			V5.1.0									

General E-OBd / OBD-2 Workshop Manual Information

Workshop Manual Information								
Total Diagnosis Flow Inquiry Occasional Failure	Total Diagnosis Flow Inquiry Occasional Failure	Intake System Test Procedure Fuel System Test Procedure Basic Electric Test Procedure	Symptoms Resulting From a Non-CRS Malfunction	Vehicle Diagnostic Connector Location	Vehicle Diagnostic Connector Location	Data Parameter Descriptions Data Monitor Parameter Reference Values	Symptom Based Troubleshooting DTC Based Troubleshooting	Service Mode Descriptions Tips And Tricks
V3.1.0	V3.1.0	V3.1.0	V3.1.0	V3.1.0	V3.1.0	V3.1.0	V3.1.0	V3.1.0



**E-OBd
&
OBD-2 Software**
(optionally available)

V3.0.0